 



Changing the spool on the *Ulti Mode* reel

The *Ulti Mode* reel consists of a reel + a large arbor spool onto which the line is loaded.

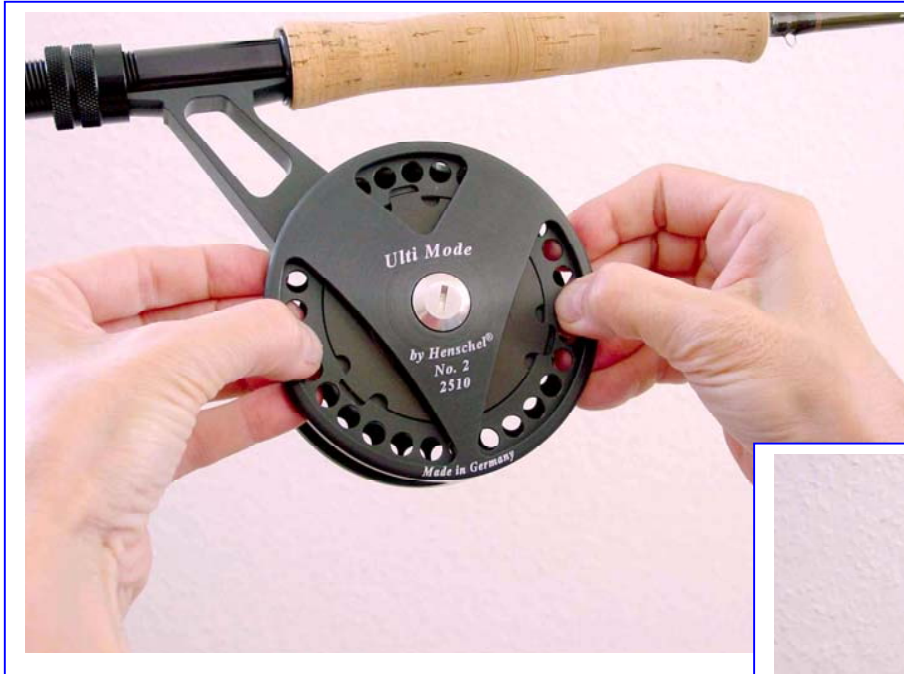

The spool is removed by pressing it out of the reel. Hold the reel in both hands placing your thumbs onto the spool on the frame side of the reel.

 Press the spool with your thumbs until the bearing holding the spool onto the reel springs back and unlocks the spool. The spool will now slide off the reel.

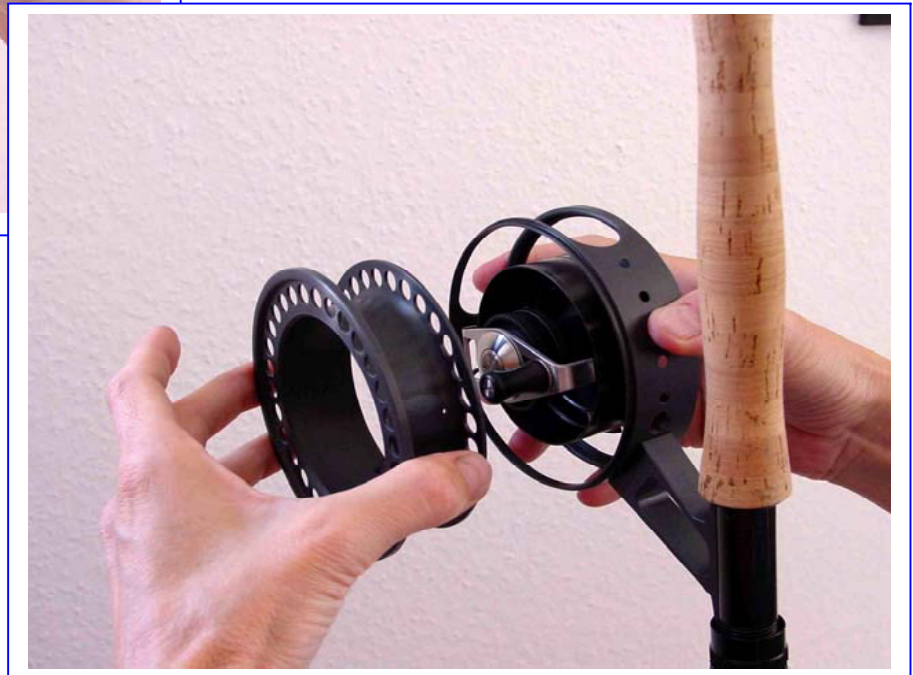

To reinstall the spool, put the spool back onto the reel being careful to align the catches on the reel with the notches on the spool.

Then press the spool into place.

To insure that the spool is correctly seated onto the reel, you can run your finger over the connection of the catches on the reel and the notches on the spool and the connection should be smooth to the touch.

This can be accomplished as follows:



Put the spool back onto the reel being careful not to cant the spool and force it onto the reel.

It is not important to align the “catches and notches” until the spool is on the reel. Then align the “catches” on the reel with the notches on the spool by holding the catches on the spool and rotating the spool until they are aligned.


Then snap the spool into position.

Run a finger over the connection between the catch and the notch.

The connection should be smooth to the touch or the spool is not fully seated onto the reel.



Arrow to show catch and notch on photo

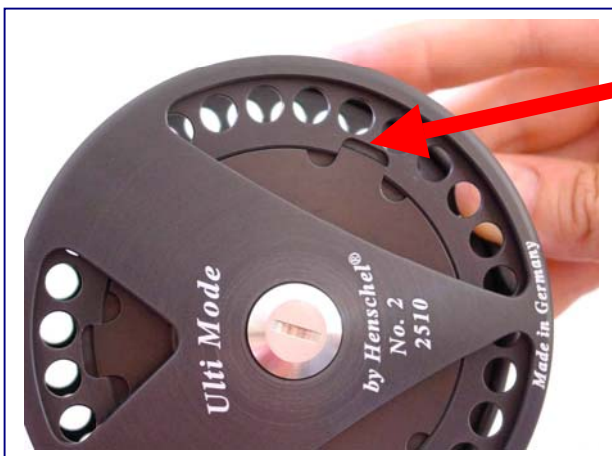

Germany: Weiherweg 4
88131 Bodolz
phone: + 49 (0) 8382 / 2744409
email: khhenschel@aol.com

www.henschelreels.com